

LS-85

Expanded Basic

Stationary IR System



Configuration

LS-85-01-GY (Grey Radiators - North America)
 LS-85-02-GY (Grey Radiators - Asia, UK)
 LS-85-03-GY (Grey Radiators - Euro)
 LS-85-01-WH (White Radiators - North America)
 LS-85-02-WH (White Radiators - Asia, UK)
 LS-85-03-WH (White Radiators - Euro)

The Expanded Basic Stationary IR System is designed for applications where a variety of listening needs are necessary. This system includes both types of receiver, neckloop, headphone and the transmitter is rack mountable. Custom systems available.

Highlights

- Accommodates up to four (4) listeners – great for applications to accommodate a small group.
- Outstanding coverage – 10,000 ft² (929 m²).
- Secure wireless communication – ideal for applications where isolation of the signal is important.
- Up to four (4) channels mono or stereo – no need to sacrifice multiple channels to achieve stereo transmissions.
- Easy to specify, install and use.
- Outstanding performance ensures crystal clear sound for listeners.

Architectural Specification

The LS-85 Expanded Basic Stationary IR System shall use infrared (IR) light to transmit audio from IR emitting radiators to portable IR receivers. The system shall use IR modulating frequencies above 2.0 MHz. The system transmitter shall have a timer that shuts off the carriers after 30 minutes when no audio is present at the transmitter. Channel selection shall be capable of being locked. The system shall be capable of transmitting on four (4) carriers and each of the four (4) carriers shall be capable of transmitting a mono or stereo signal. The system shall have a frequency response of 100 to 15 KHz (+/-3 dB), less than 2% distortion and shall have signal to ratio of greater than 60 dB. A single emitting radiator shall have a transmitting area of no less than 10,000 ft² (929 m²) (one carrier) or greater for each radiator specified. The radiator shall be powered via CAT-5 cabling and the RF from the transmitter shall be carried by 50 ohm coaxial cable.

Requires

None


Used With

LR-44 IR Lanyard 4-Channel Receiver

Includes

- (1) LT-82 Stationary IR Transmitter
- (1) LA-326 Universal Rack Mounting Kit
- (1) LA-140 Stationary IR Radiator
- (3) LR-42 IR Stethoscope 4-Channel Receiver
- (1) LR-44 IR Lanyard 4-Channel Receiver
- (1) LA-166 Neck Loop
- (1) LA-165 Stereo Headphones
- (4) LA-363 High Capacity AAA Alkalkaline Batteries (2)
- (1) LA-304 Assistive Listening Notification Signage Kit

LS-85 Expanded Basic Stationary IR System

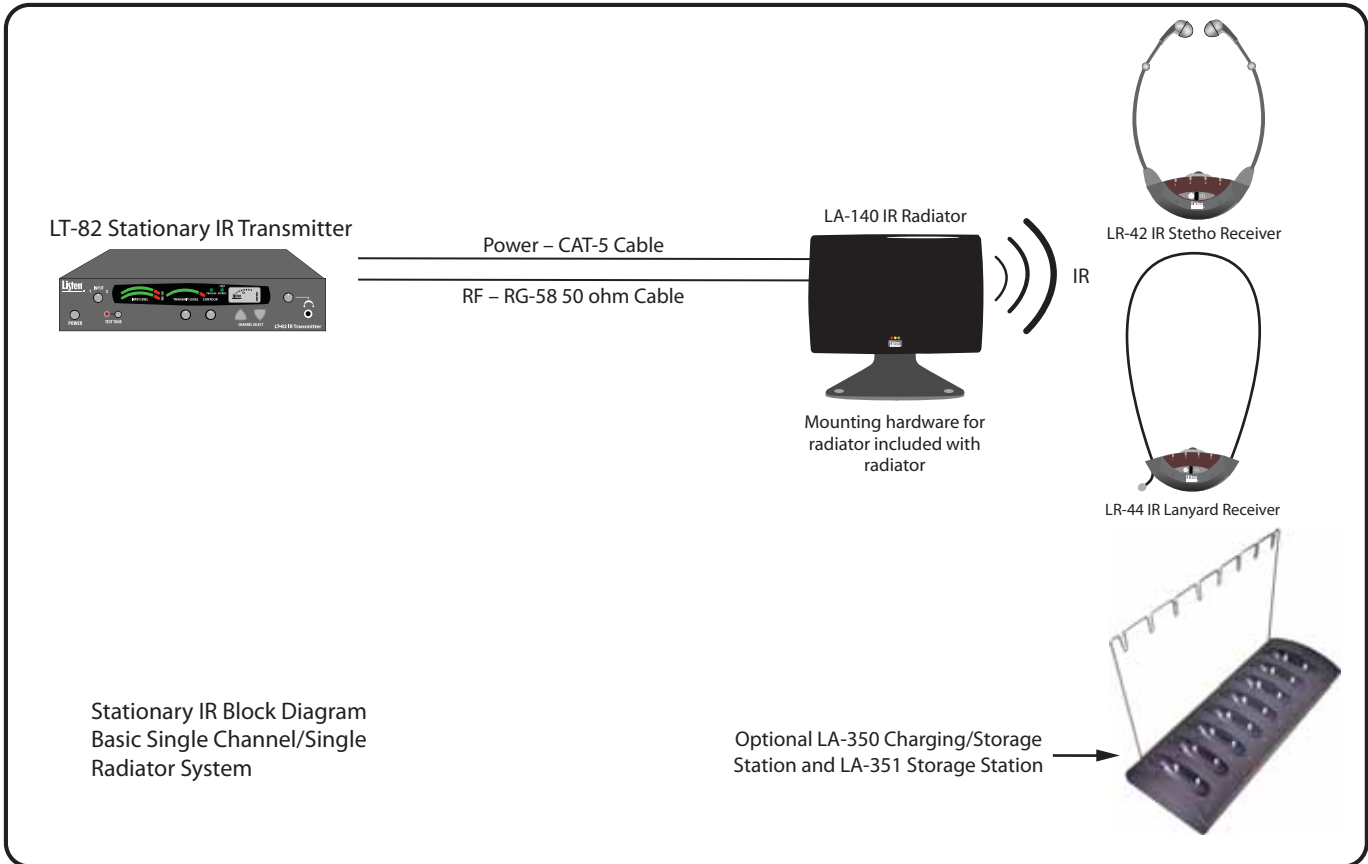

Accessories



Cables / Connectors

LA -70 CAT-5e Cable (Per ft.)
LA-71 RJ-45 CA-5e Connector (10)
LA-72 RJ-45 CAT-5e Coupler
LA-89 Interconnection Coaxial Cable
LA-112 RG-58 50 Ohm Coaxial Cable (Per ft.)
LA-115 RG-58 BNC Coupler
LA-127 RG-58 BNC Connector
LA-391 RG-58 50 Ohm Preassembled Coaxial Cable (Per ft.)
LA-392 RG-59 75 Ohm Preassembled Coaxial Cable (Per ft.)
LA-393 NiMH Rechargeable Battery Pack for IR Receivers



Mounting

LA-326 Universal Rack Mounting Kit
LA-337 IR Radiator Floor Stand
LA-342 Stationary IR Dual Radiator Mounting Bracket



Power / Charging Supply

LA-152 IR Receiver Battery Compartment (Non-charging)
LA-205 (01,02,03) 30 VDC Extension/Replacement Power Supply for LA-140/ LT-82
LA-350 (01,02,03) 8-Unit IR Charging/Storage Station
LA-351 8-Unit IR Storage Station
LA-364 NiMH Rechargeable Battery Pack for IR Receivers



Cases

LA-320 Configurable Carrying Case



Headphones

LA-161 Single Ear Bud
LA-162 Stereo Ear Buds
LA-164 Ear Speaker
LA-165 Stereo Headphones
LA-166 Neck Loop
LA-170 Behind-the-Head Stereo Headphone



Miscellaneous

LA-150 Replacement Lanyard for LR-44
LA-151 Replacement Eartips for LR-42 (20)
LR-44 IR Lanyard 4-Channel Receiver

Related Systems

LS-80 – Basic Stationary IR System

Includes:

- (1) LT-82-01 Stationary IR Transmitter
- (1) LA-140-GY Stationary IR Radiator
- (4) LR-42 Stationary IR Stethoscope 4-Channel Receiver
- (4) LA-363 High Capacity AAA Alkaline Batteries (2)
- (1) LA-304 Assistive Listening Notification Signage Kit



LS-81 – Performance Stationary IR System

Includes:

- (1) LT-82-01 Stationary IR Transmitter
- (1) LA-326 Universal Rack Mounting Kit
- (2) LA-140-GY Stationary IR Radiator
- (4) LR-42 Stationary IR Stethoscope 4-Channel Receiver
- (4) LA-363 High Capacity AAA Alkaline Batteries (2)
- (1) LA-351 Stationary IR Storage Station
- (1) LA-304 Assistive Listening Notification Signage Kit



LS-82 – Advanced Installed IR System

Includes:

- (1) LT-82-01 Stationary IR Transmitter
- (1) LA-326 Universal Rack Mounting Kit
- (2) LA-140-GY Stationary IR Radiator
- (8) LR-42 Stationary IR Stethoscope 4-Channel Receiver
- (8) LA-364 NiMH Rechargeable Battery Pack for Stationary IR Receivers
- (1) LA-350-01 8-Unit IR Charging/Storage Station
- (1) LA-304 Assistive Listening Notification Signage Kit



LS-83 – 4-Channel, 48-Listener Stationary IR System

Includes:

- (4) LT-82-01 Stationary IR Transmitter
- (2) LA-326 Universal Rack Mounting Kit
- (3) LA-89 Interconnection Coaxial Cable
- (8) LA-140-GY Stationary IR Radiator
- (48) LR-42 Stationary IR Stethoscope 4-Channel Receiver
- (48) LA-364 NiMH Rechargeable Battery Pack for Stationary IR Receivers
- (6) LA-350-01 8-Unit IR Charging/Storage Station
- (2) LA-304 Assistive Listening Notification Signage Kit



LS-84 – Expanded Performance (2-Channel) Stationary IR System

Includes:

- (2) LT-82-01 Stationary IR Transmitter
- (1) LA-326 Universal Rack Mounting Kit
- (1) LA-140-GY Stationary IR Radiator
- (5) LR-42 Stationary IR Stethoscope 4-Channel Receiver
- (5) LA-364 NiMH Rechargeable Battery Pack for Stationary IR Receivers
- (1) LA-350-01 8-Unit IR Charging/Storage Station
- (1) LA-304 Assistive Listening Notification Signage Kit



Frequently Asked Questions

- Q** How many carriers does the LT-82 Stationary IR Transmitter produce?
A One.
- Q** How many carriers can be produced simultaneously in a room?
A Four. You will need one LT-82 Stationary IR Transmitter per carrier.
- Q** Is there any performance degradation in stereo mode?
A Yes, stereo operation raises the noise floor slightly.
- Q** Can I operate some channels in mono and others in stereo?
A Yes.
- Q** How are radiators connected to the LT-82?
A The carrier (signal) is connected using RG-58 coaxial cable; power is connected using standard CAT-5 cabling.
- Q** Can the LT-82 be operated on 230 VAC?
A Yes, the LT-82 has a universal power supply that can be used anywhere in the world.
- Q** How much coverage is provided with the LA-140 radiator?
A Approximately 10,000 ft² (929 m²).
- Q** Does the number of carriers affect the coverage?
A Yes, for two carriers, the coverage per carrier is halved. For four carriers, the coverage per carrier is one-fourth.
- Q** How is power delivered to the radiator?
A Power is delivered with CAT-5 cables (connected between the radiator and either the LT-82 transmitter or the LA-205 power supply).
- Q** How many radiators can be powered from the LT-82 or LA-205 power supply?
A Two.
- Q** What is the purpose of the delay compensation switch?
A This switch allows you to set up delay timing in a multi-radiator system so that each radiator receives the carrier at exactly the same time. This prevents signal dropouts that can be caused by out-of-phase signals (multi-path). With Listen's delay compensation switch, it is not necessary to cut all of your coaxial cables to the same length - your shorter runs can use shorter cables, keeping your installation clean (and cost-effective).